AUTOMATIC JAPAN 3 DISCS

AVI-8

Winding the mainspring

Automatic winding watch can also be hand winded by turning the crown in "A" position. Wind 15-20 times and it will start to move naturally after shaking slightly.

SETTING THE TIME

- 1. Pull the crown out to the 1st position.
- 2. Turn the crown to set hour and minute discs.
- 3. Push the crown back to the normal position.

